

12E


VW Caddy; ab Modell 2004

Side protection bars 42 straight / Flankenschutzrohr 42 gerade



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucctionnes de montage • Manual

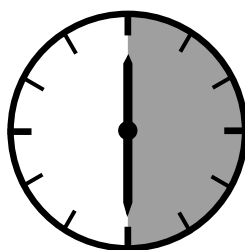

30 Minuten

Artikel-Nr:

12E 4251 Stainless Steel

12E 5251 Steel black

.....
12E 4351 Stainless Steel

12E 5351 Steel black

12E 9351 Mounting Set

Revision 1: 7.3.2011


12E

VW Caddy; ab Modell 2004

Side protection bars 42 straight / Flankenschutzrohr 42 gerade

Required tools / Benötigte Werkzeuge / Outils requis / Herramientas necesarias

SW: 13 mm

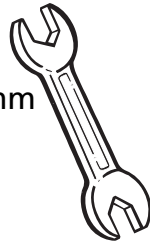

M8: 25 Nm



Parts list / Teileliste / Lista de accesorios

1 12E 4251.1 (12E 5251.1) **2x**



or / oder

1 12E 4351.1 (12E 5351.1) **2x**



Standard Parts list / Normteileliste

a		M8 x 20; DIN 933	6x
b		M8; DIN 934	6x
c		ø8; DIN 127	12x
d		ø8,4; DIN 9021	12x

Mounting set 12E 9351 / Montagesatz 12E 9351

2 M8; 13D 5055 **6x** **3** 12E 5153 **6x**



Artikel-Nr:

12E 4251 Stainless Steel

12E 5251 Steel black

.....

12E 4351 Stainless Steel

12E 5351 Steel black

12E 9351 Mounting Set

Revision 1: 7.3.2011

