

# 11X


**Opel Movano/Renault Master; Md.2010/2019  
Nissan NV 400; Modell 2012**

Spoiler Protective Tube 42 straight / Spoilerschutzrohr 42 gerade



## ASSEMBLY INSTRUCTIONS

Montageanleitung • Instructions de montage  
Instrucctionnes de montage • Manual

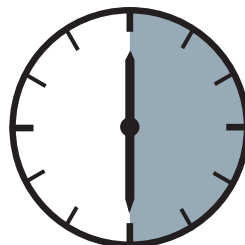

30 Minuten

### Artikel-Nr:

11X4016 Stainless Steel  
11X5016 black Steel  
11X9016 Assembly-kit

Revision 3: 05.05.2022



# 11X


## Opel Movano/Renault Master; Md.2010/2019 Nissan NV 400; Modell 2012

Spoiler Protective Tube 42 straight / Spoilerschutzrohr 42 gerade

### Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias



SW: 5 mm

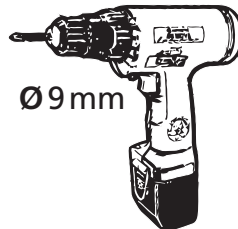

Ø 9 mm





M6: 10 Nm

### Parts list / Teileliste / Lista de accesorios

**1** 11X4016.1 / 11X5016.1





### Standard Parts list / Normteileliste

<b>a</b>		M6x25; DIN 912	4x
<b>b</b>		6,4; DIN 125	4x

### Assembly-kit 11X9016 / Montagesatz 11X9016

**2** 005898      4x      **3** M6; 13B 5047 4x

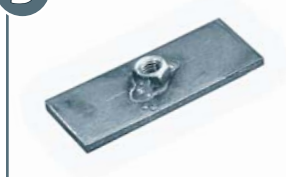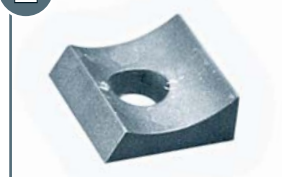







### Artikel-Nr:

11X4016 Stainless Steel

11X5016 black Steel

11X9016 Assembly-kit

Revision 3: 05.05.2022

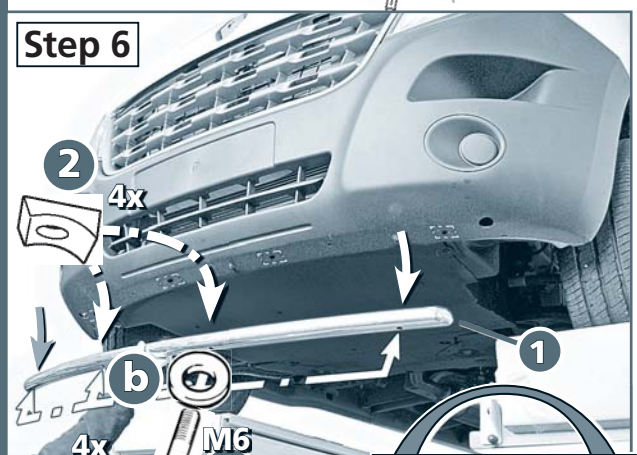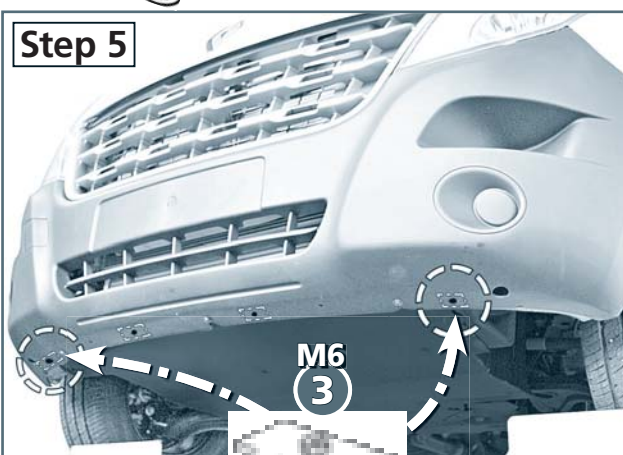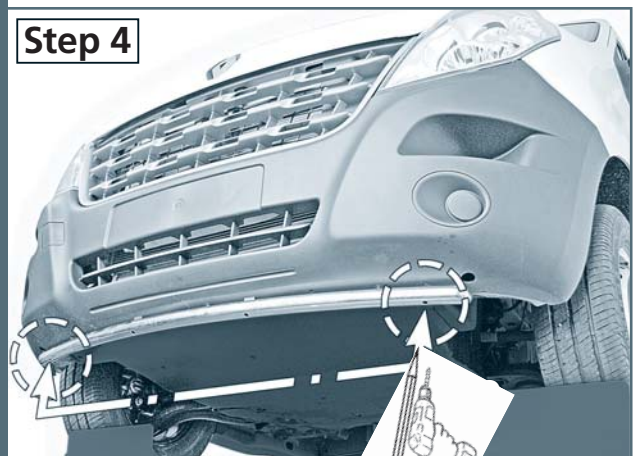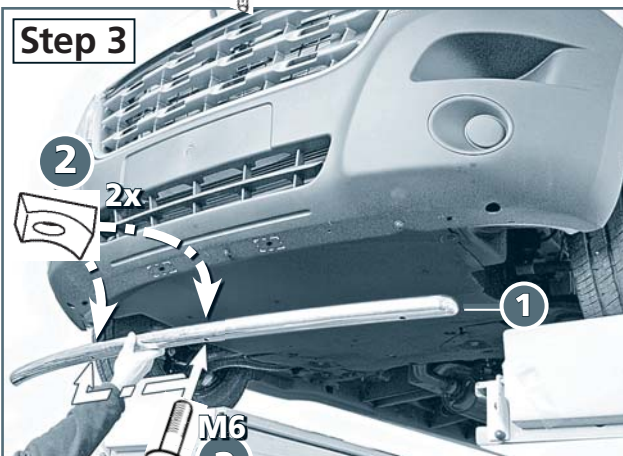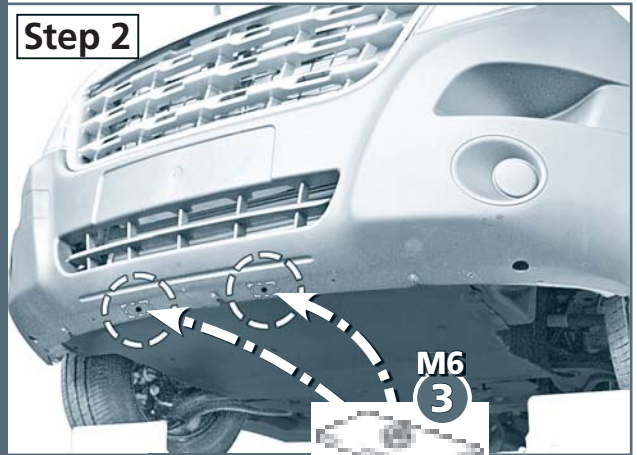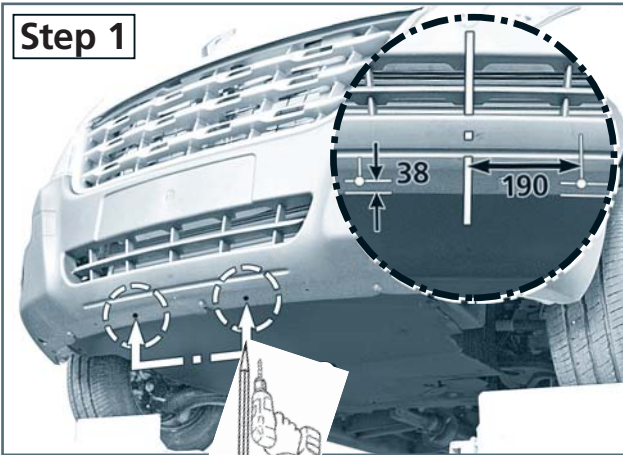

Artikel-Nr:  
11X4016 Stainless Steel

Revision 3: 05.05.2022

